



# S.W-VC108 Remote View setting

Before apply IE viewing, please ensure to correctly set the DVR card's network parameter, and permit the system to download the ActiveX software.

The directory for network parameter setting: **my computer\control panel\network\local connection property\Internet protocol(TCP/IP)**, as follow:

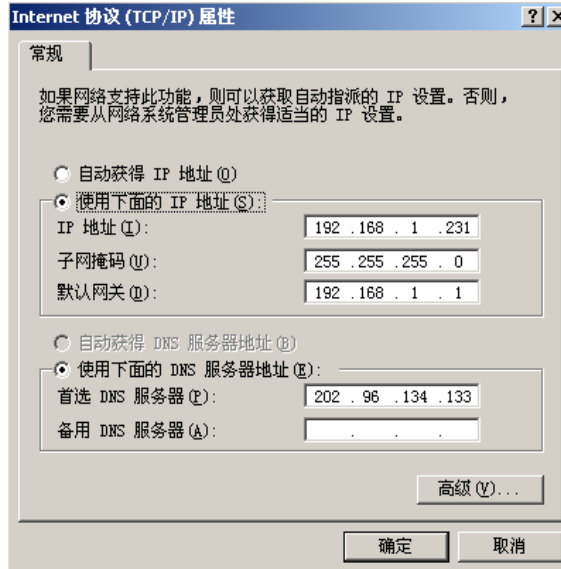

System ActiveX software download management, directory for setting: **Microsoft Internet Explorer\Tools\Internet preference\security\self setting the level\ActiveX plug-in**, set it to YES.

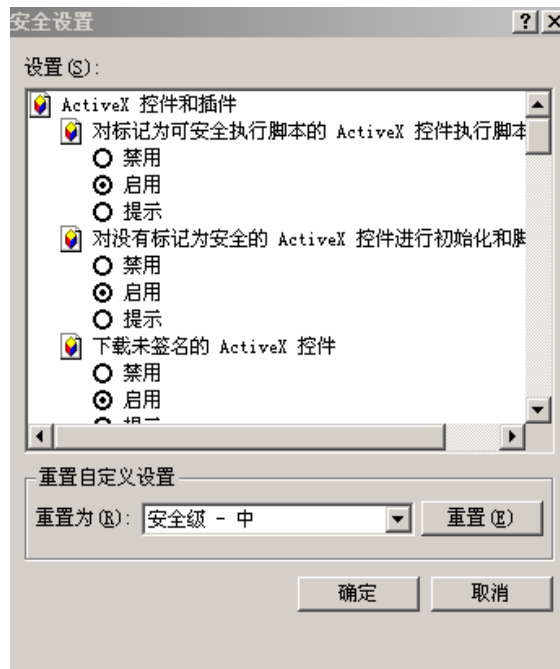

1. LAN IE view

After above two steps setting, user can run IE, and open the remote view interface directly by input the DVR card's IP address.




## 2. Internet IE view

Internet remote surveillance include two methods: the mainframe machine dial up by MODEN and dial up by Router. Since the user will get a external network IP address after mainframe machine dial up; setting method is just the same as LAN IE view, just no need to set the DVR card end's IP address.


If it's Router dial up network, since the external network IP address is set in the Router, external network can visit local network only by port mapping. The operation for setting as follows:

### a) Router setting

#### A. Open Router(TP-LINK) setting, as follows:

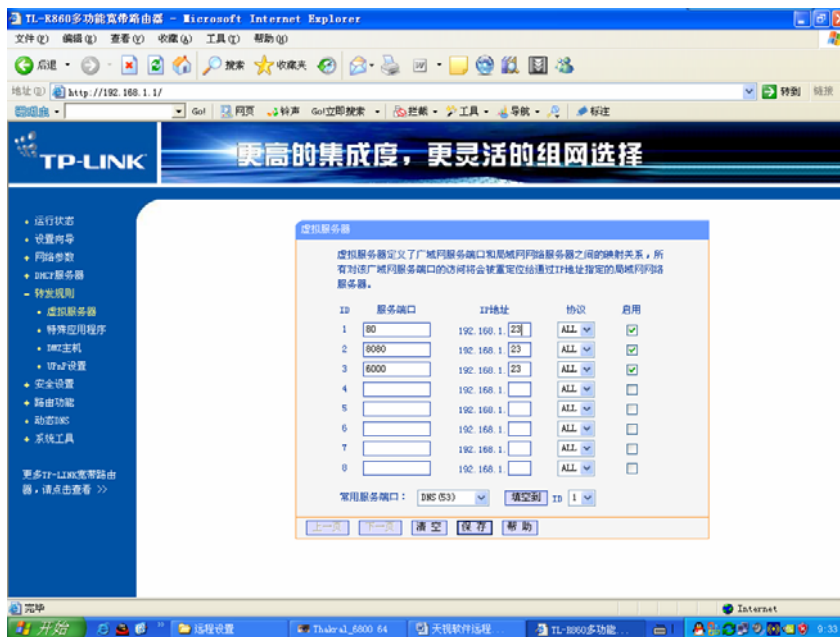


#### B. Set "Transmit rule"

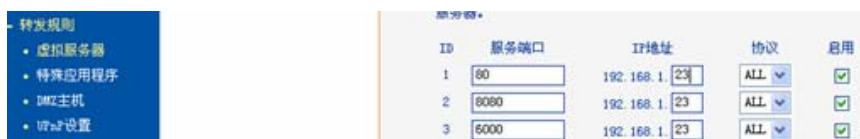

#### C. Set in "Service port", orderly to add: 80, 3816, 3818, 8080, 8081.

#### D. Set in "IP Address", add the DVR's IP Address.

- E. Set in “Protocol”, select “ALL”
- F. Set in “Activate”, select the item which opened the port.
- G. Save the setting
- H. Set in “Run Status”, you can see present external network IP address

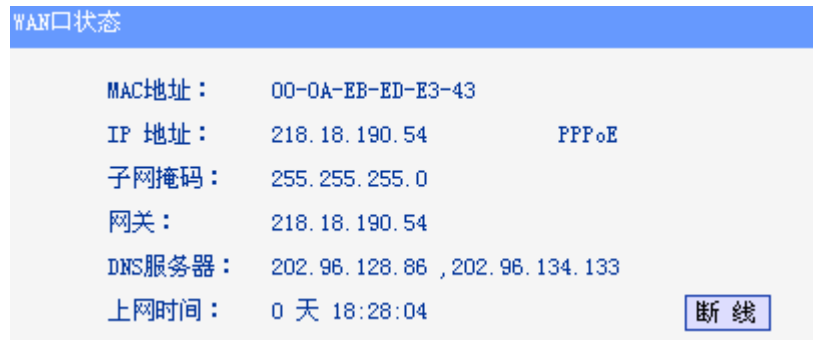

b) Firewall setting

If you apply OS above WINDOWS XP, or your OS already has firewall, we suggest you to close the firewall before connecting for remote view, to facilitate download of remote ActiveX plugin software.

c) Connect setting

- A. Run IE, input external network IP address or applied domain name.
- B. After ActiveX plugin software downloaded, input username: 100-001, password: 1234, and click return.

**Note:**

- a) If already applied domain name, must run domain name client software on the mainframe.